

cozikan Bunk Nets

Installing Your Bunk Net

Lay your net flat prior to installing to soften the folds - laying it in the sun can help. Hold your net up on the inside of the bunk to make sure it is the correct fit. A 20mm edge will turn 90 degrees onto a side wall of the bunk. A 40mm edge will sit flat on the inside of a bunk panel. The bottom 40mm edge will fold under the mattress to attach to the bunk base.

You will need

Tools:

Cordless drill
Drill bits to suit bunk panels – (usually wood)
Drill bit for the sail track – metal drill bit
Tool to cut sail track - eg.: angle grinder
Screwdriver
Marker pen

Hardware:


Sail track - the nets are designed to fit the sail track sold by Bunnings - other tracking maybe used, you will need to check the channel fits the cord on the Bunk Net.

Screws to attach the track - If your bunk is made of a material other than wood panelling (ie.: metal) make sure you have the appropriate screws.


Screws to attach the studs - metal or wood - Check the screw head fits down inside the provided studs and that the length of the screw, once in the stud, won't poke through the other side of the bunk panelling.

The items below are available at Bunnings. Ensure screw size and type are appropriate for your van. Sail track comes in a couple of lengths and colours in most stores.
The sail track does not need to be one complete piece for the entire length, can be made up of multiple pieces

Metal Mate 27.95 x 12.7 x 1.7mm
3m Aluminium Section Sail Track

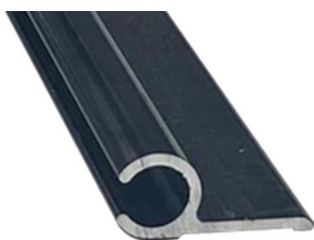

Pinnacle 3.5 x 16mm Black
Countersunk Timber Screw

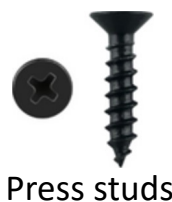


Press studs

Zenith 8G x 13mm White
Button Head Screw



Sail track

Cut the sail track to the length of the top of your net. Drill holes into the flat section of the sail track.

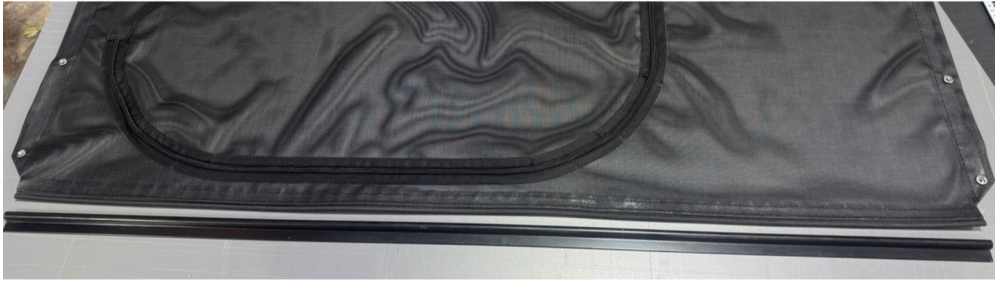

Thread the Bunk Net through the sail track and screw the track to the underside of the bunk above.

Position the net making sure the zip is within the opening and the press studs on both ends can be attached to the bunk panels.



Run a marker pen around the edge of the first press stud socket on the side of the net (at the top), then firmly push the socket onto the bunk panel to leave a stamp.

Screw the stud provided into the centre of the stamped circle. Attach the press stud and then do the same for the remaining studs on that side. Then move to the other side and do the same.

To install the bottom studs you will need to open the zip and lift the mattress up to access inside the bunk alternatively, if possible, climb into the bunk and attach the studs from inside.



Ceiling Mount for Top Bunks

Where possible attach the sail track where the cross studs run above the ceiling panel on your van. Check the panelling material to ensure you are using the correct type of screws.